



USING SPRINT PCS PICTURE MAIL

© 2006 Sprint Nextel. All rights reserved. SPRINT, the "Going Forward" logo, and other trademarks are trademarks of Sprint Nextel.

June 6, 2006

Sprint PCS Picture Mail

With Sprint PCS Picture Mail, you can instantly shoot, share, and print sharp, high-resolution digital pictures and take and send short video clips with your phone.

Use your phone to take full-color digital pictures or video clips with sound. Then either store the pictures and videos or send them from your phone to email addresses or other compatible phones. It's that easy.

Archive your pictures and videos at www.sprint.com/picturemail and take advantage of the Web site's advanced features, which let you crop pictures, organize your own albums, share your pictures and videos, order prints, and more.

Note: Your phone's camera and camcorder settings and menu options may differ from those outlined in this guide. Please refer to your phone's user guide for details.



Taking Pictures

Taking pictures with your phone is as simple as choosing a subject, pointing the lens, and pressing a button. For details on how to use all the camera features of your phone, please see your phone's user guide.

To take a picture:

1. From the phone's main menu, select **Pictures > Camera** to activate Camera mode.
2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press **OK**, **Capture**, or the Side Camera button to take the picture. (You will see "Saving" and the picture will be displayed.)
4. Press **Options** to display picture options, or press **OK** to return to Camera mode to take another picture.

Note:	The instructions in this guide may not match your phone's operation. Please refer to your phone's user guide for complete phone operation instructions.
--------------	---

Creating Your Sprint PCS Picture Mail Password

The first time you attempt to upload, share, or use the Picture Mail Web site, you will need to establish a Picture Mail password through your phone. This password will also allow you to sign in to the Picture Mail Web site at www.sprint.com/picturemail, where you can access and manage your uploaded pictures.

To create your Picture Mail password:

1. When prompted, enter your four-digit password using numbers or letters and press **OK**.

Tip:

Write down your Picture Mail password in a secure place.

2. Please wait while the system creates your account.

Once you have received confirmation that your account has been successfully registered, you may upload and share pictures and access the Picture Mail Web site.

Recording Videos

Recording videos with your phone is as simple as taking a picture. For details on how to use all the video features of your phone, please see your phone's user guide.

To record a video:

1. From the phone's main menu, select **Pictures > Camcorder** to activate Video mode.
2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press **OK** (or **Record**) to begin recording the video.
4. Press **OK** again (or press **Done**) to stop recording. (Recording will stop automatically after a preset time, depending on your phone and its mass storage options.)
5. Press **Next** (right softkey) for additional video options (including **Send Msg, Play, Upload, Assign, Erase, and Review Media**) or press **OK** to return to Video mode.

Tip:

For complete video option details, please refer to your phone's user guide.

Sharing Sprint PCS Picture Mail

Once you've taken a picture or a video, you can instantly share it with family and friends. You can send pictures and videos to their email addresses or to their messaging-ready phones.

To share Sprint PCS Picture Mail from your phone:

1. From the main menu, select **Pictures > My Albums > In Phone**.
2. Select the pictures or videos you want to send, and then select **Options > Send > To Contacts**. (A message may be displayed.)

Note: The first time you send a picture or video, you will be prompted to establish a Sprint PCS Picture Mail Web site account and password. (See "Creating Your Sprint PCS Picture Mail Password" on page 3.)

3. Select a recipient from your Contacts list or enter a wireless phone number or email address.
4. Select **Next** when you have finished selecting or entering recipients.
5. Select the desired options to include a text message or a voice recording, or to set the message priority.
6. Confirm your recipients, message, voice recording, and picture or video.
7. Press the appropriate softkey to send your picture mail.

Note: See your phone's user guide for additional details.

You can also send pictures and videos from your phone's Messaging menu.

To share Sprint PCS Picture Mail from Messaging:

1. From the main menu, select **Messaging > Send Message > Picture Mail**.
2. Select an option to enter or select recipients for your picture mail.
3. Select **Next** when you have finished selecting or entering recipients.
4. Select a location from which to select pictures or videos to send (such as **In Phone, Memory Card, or Online Albums**).
5. Select the pictures or videos you want to send, and then select **Next**.
6. Complete steps 5–7 under “To share Sprint PCS Picture Mail from your phone:” on page 5.

Tip:

To take and send a new picture or video, select **Take New Picture** or **Take New Video** during step 4 above.

To learn more about Sprint PCS Picture Mail, visit www.sprint.com and check out the Sprint PCS Vision Guide, or go to the Sprint PCS Picture Mail Web site at www.sprint.com/picturemail for more information.

Managing Sprint PCS Picture Mail

Using the Sprint PCS Picture Mail Web Site

Once you have uploaded pictures from your phone to your online Sprint PCS Picture Mail account at www.sprint.com/picturemail, you can use your personal computer to manage your pictures. From the Sprint PCS Picture Mail Web site, you can share pictures, edit album titles, add captions, and organize images. You can even send your pictures to be printed at participating retail locations. You will also have access to picture management tools to improve and customize your pictures. You'll be able to lighten, darken, crop, add antique effects, add comic bubbles and cartoon effects, and use other features to transform your pictures.

To access the Sprint PCS Picture Mail Web site:

1. From your computer's Internet connection, go to www.sprint.com/picturemail.
2. Enter your phone number and Sprint PCS Picture Mail password to register.

Managing Online Pictures From Your Phone

You can use your phone to manage, edit, or share pictures you have uploaded to the Sprint PCS Picture Mail Web site at www.sprint.com/picturemail.

To view your online pictures from your phone:

1. Select **Menu > Pictures > My Albums > Online Albums**. (Depending on your settings you may be prompted to accept a Sprint PCS Vision connection.) (The My Uploads folder and your albums are displayed.)
2. Highlight **My Uploads** or an album title and press to display. (Thumbnail pictures, up to nine per screen, are displayed.)

Tip:	To expand a selected picture from thumbnail to full-screen, select Expand (left softkey).
-------------	--

3. Use your navigation key to select a picture.
4. Select **Options** (right softkey) to display your online picture options.

Uploading Pictures

1. Select **Menu > Pictures > My Albums > Online Albums > Upload Pics**. (Thumbnail pictures will be displayed.)
2. Select the picture(s) you wish to upload and select **Upload** (left softkey).
3. Select **This Picture**, **Selected Pictures**, or **All Pictures**, and then select **My Uploads**.

Downloading Your Online Pictures

From your online Sprint PCS Picture Mail albums display at www.sprint.com/picturemail, you can select pictures to download to your phone's In Phone folder.

To download pictures from the Sprint PCS Picture Mail Web site:

1. From the online pictures display, select the picture you wish to download and select **Options** (right softkey).
2. Select **Save to Phone**, and then select one of the following options and press:
 - **Set as Picture ID** to download and assign the selected picture as a Picture ID.
 - **Set as Scrn Saver** to download and assign the selected picture as a screen saver.
 - **Download Only** to download the picture to the In Phone folder.

Sending Online Sprint PCS Picture Mail

To send pictures using the online Address Book:

1. From the online Sprint PCS Picture Mail display at www.sprint.com/picturemail, select a picture you wish to send and select **Send** (left softkey).
2. Select **Recipients > Online Addr. Book**.
3. Highlight a recipient or recipients (up to 10) from your Online Address Book and press **[OK]**.
4. Select **Done** (left softkey) when you have finished selecting recipients.
5. Select **Next** (left softkey).

6. To include a text message, highlight the box under **Text Message** and press the appropriate softkey. Enter your message and press **[OK]**.
7. Confirm your recipients and attached data.
8. Press the appropriate softkey to send the Sprint PCS Picture Mail.

To send an album from the online pictures menu:

1. From the online albums display, select an album you wish to send and select **Send** (left softkey). (See “Managing Online Pictures and Videos From Your Phone.”)
2. Follow steps 2-8 above to complete and send your Sprint PCS Picture Mail album.

Accessing Online Picture Options From Your Phone

1. Select a picture from your online albums.
2. Select **Options** (right softkey) to display options.
3. To select an option, highlight it and press **[OK]**.
 - **Copy/Move** to copy or move pictures to a selected album.
 - **Copy This** to copy the selected picture to the album.
 - **Copy All** to copy all pictures in the current album (or Inbox) to the target album.
 - **Move This** to move the selected picture to the album.
 - **Move All** to move all pictures in the current album (or Inbox) to the target album.
 - **Download** to copy the selected picture to the In Phone folder.

- **Erase** to select **Erase This** or **Erase All** to erase a single picture or all pictures saved in the current album (or Inbox).
- **Online Albums** to create a new album (from the Inbox only). Enter the album name and select **Save** (left softkey).
- **Expand** to expand the selected picture.

To access your online Albums options from your phone:

1. Display the album list in the Online Sprint PCS Picture Mail menu.
2. Use your navigation key to select an album (or Inbox).
3. Select **Options**(right softkey) to display options.
4. To select an option, highlight it and press **[OK]**.
 - **Share Album** to share the album through the Sprint PCS Picture Mail Web site. (See “Sending Online Sprint PCS Picture Mail.”)
 - **Create Album** to create a new album. Enter a new album name and select **Save** (left softkey).
 - **Erase Album** to delete the selected album.
 - **Rename Album** to rename the selected album. Enter a new name and select **Save** (left softkey).
 - **Next** to display the next 20 albums (if applicable).
 - **Previous** to display the previous 20 albums (if applicable).